


## Flow diverters for column radiators less than 20 sections long

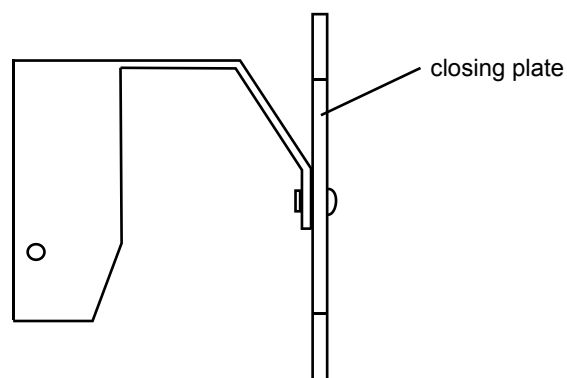

Flow diverters are only used for radiators with BOE (Bottom Opposite End) connections to ensure equal flow throughout the radiator. Spring the flow diverter into the **flow** connection bush, as shown in the photograph above. The closing plate should be eased into the radiator port and the connection bush tightened as usual.